


STAIRCASE + TOP LANDING CORNIX

++/32/(0)3/830 22 88
++/32/(0)67/41 12 40

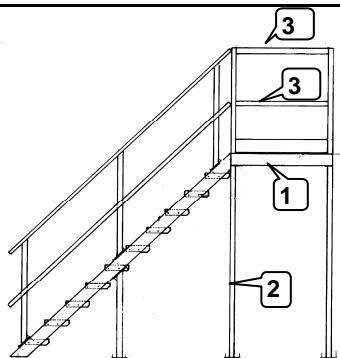

1. For the installation of the staircase we refer to the installation manual 'staircase'.
2. First install the staircase as mentioned under section 1 in the installation manual 'staircase'.
3. Connect the staircase stringboards to the top landing stringboards (U150/50) with bolts M10x20.
The top landing is delivered completely welded.
4. Now fix the support columns (2 or 4 depending on the positioning of the top landing) to the top landing structure with M10x70 bolts (2 per support column) and erect the staircase.
5. Fixe the bracing (tube 38 mm) to the support columns with bolts M10x70.
6. Install the chipboard decking : simply put it in between the top landing stringboards.
7. Install the staircase as mentionned under section 3 to 9 from the installation manual 'staircase'. Anchor the support frames to the floor with the anchors M10x90 (4 per frame) and fix the top landing to your platform with the screw bolts 8x35 from the staircase.
8. Now install the eventual top landing handrails : fix the handrailposts to the stringboards with bolts M10x20 (2 per post).
The handrail is delivered completely welded. Put the caps.
9. Your staircase & top landing are now well installed.

For the other parts
please consult the part
list in the 'staircase'
installation manual

nomenclature								
1	top landing	top landing welded structure		length x width (mm)	x		1	
		chipboard decking		length x width (mm)	x		1	
		bracing tube 38 mm		length (mm)			2	
	2	top landing columns	top landing columns		height			2 / 4
			welded handrail, side 1		length (mm)			1
	3	handrail	welded handrail, side 2		length (mm)			1
			cap	50x30			2 per side	4
			cap	40x20			2 per side	4
	bolts		anchors	M10x90	(2 per column)			
			top landing	M10x20				2
			top landing	M10x70				4
			bracing tube 38 mm	M10x70				4
handrail			M10x20			4 per side	8	